

 
#### **Maqueen Mechanic**



**Installation Manual** 









Loader Bucket



Pan-tilt-zoom Mount Plate



**Trolley Plate** 



Ultrasonic Mount Holder



Arm Servo Base



Arm Baseplate



Arm Linkage





Servo Arm Linkage



Forklift Plate



Gripper Upper Arm

## Part List



Gripper Driven Forearm



Gripper Servo Forearm



Gripper Panel



Gripper Triangular Mount Plate



M3\*35mm Copper Bolt



M3\*25mm Copper Bolt



M3\*15mm Copper Bolt



M3\*18mm Copper Bolt



Servo

 


M2.5\*5mm Screw



M3\*5mm Screw









Bulldozer



**Forklift** 



**Mechanical Beetle** 




Pan-tilt-zoom Mechanical Beetle




Pan-tilt-zoom Forklift

# Assemble and Install

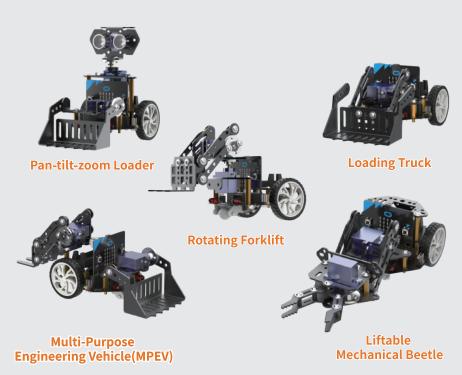



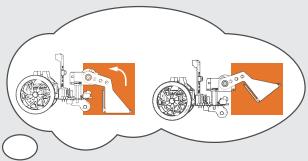




#### **Install Loader**






Step1

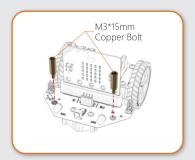


Step3

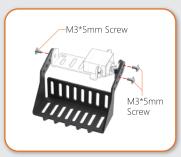

Step2



Step4

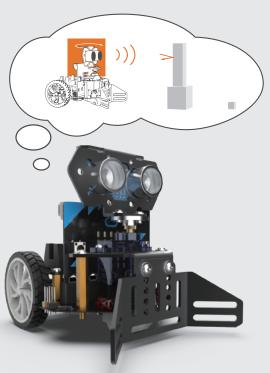

## Install Bulldozer



Step1




Step3



Step2



Step4

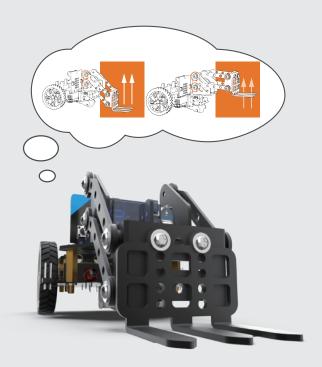

## Install Forklift



Step1



Step3



Step2



Step4





Step5



Step7




Step6



Step8

## Install Mechanical Beetle



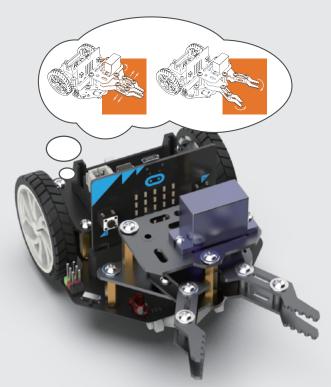



#### **Install Mechanical Beetle**



Step1



Step3



Step2




Step4

#### Install Mechanical Beetle






Step5

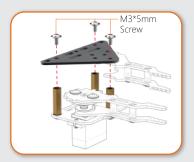

Step7

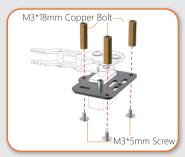


Step6



Step8




## Install Pan-tilt-zoom Mechanical Beetle

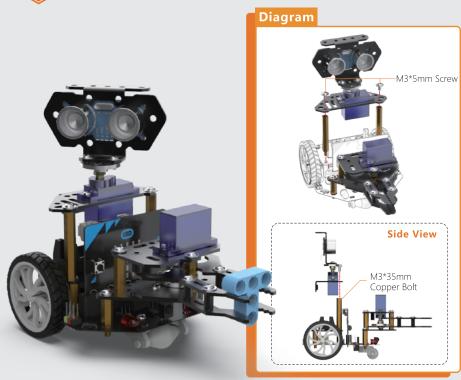


### Install Pan-tilt-zoom Forklift



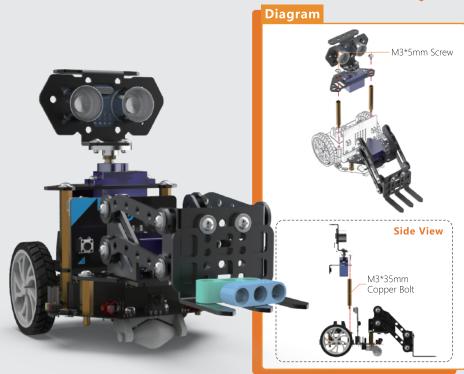





## Install Pan-tilt-zoom Loader

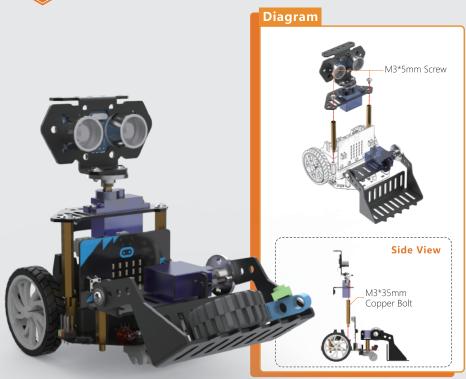

## **Install Rotating Forklift**




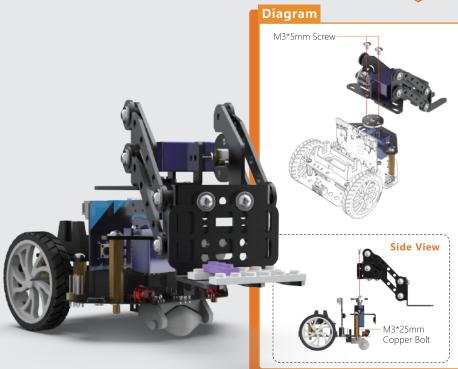


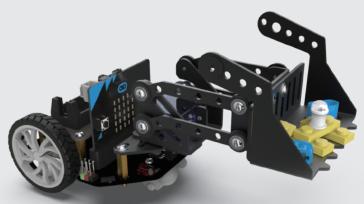

#### Diagram




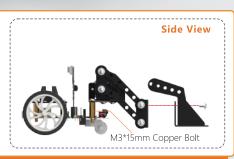

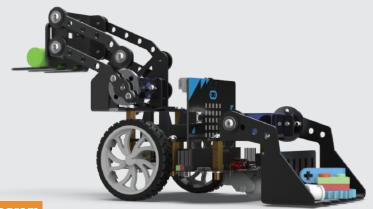

#### Diagram



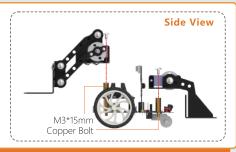



### Install Liftable Mechanical Beetle




#### Install Liftable Mechanical Beetle




#### Diagram



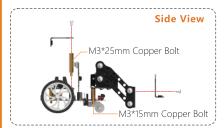



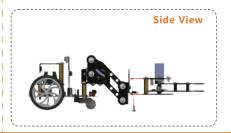



Welcome to www.dfrobot.com for more details